



## CHANGING THE REED CONTACT


### DGP® & DGPT2®

### INSTALLATION PRECAUTIONS

Before you change the Reed contact, make sure that:

- The DGPT2® contacts are not powered.
- The origin of the Reed contact damage has been identified and solved (if it does not, the new Reed contact could be damaged the same way).


### PROCEDURE

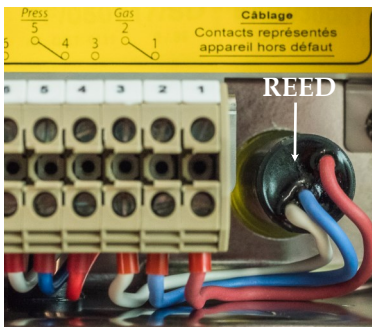


❶ Remove the DGPT2® housing cover and disconnect the Reed contact wires.




❷ Using a Phillips screwdriver, loosen off the lock-screw until the Reed contact is freed.

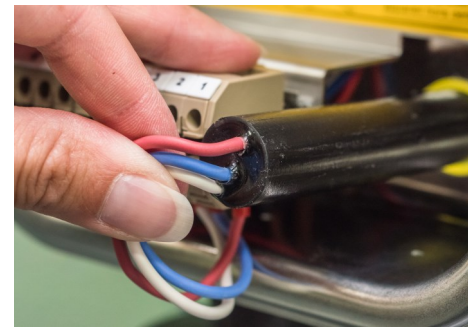

❸ Remove the Reed contact by pulling it towards you from the inside of the housing.

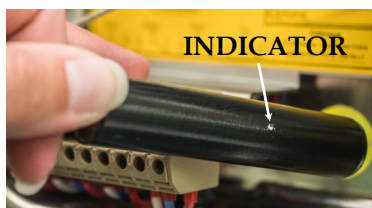

❹ Fit the new Reed contact in its chamber, pushing it right in. Make sure that the white indicator is visible inside the lock-screw hole.

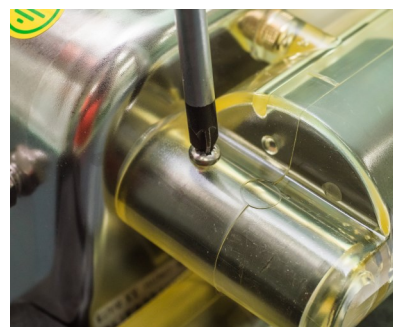

❺ Fit the lock-screw and screw it until the Reed contact is held securely in its chamber and cannot move.



❻ Wire the Reed contact:

**Terminal 1:** red wire  
**Terminal 2:** blue wire  
**Terminal 3:** white wire

REED CONTACT		Page	N° T/NOT-0085	Date: 05/07/17	Rev. 6
DGPT2® & DGP®		1			